

Step 1:

Measure your openings in your house. If the house is build from block you allow 100 mm overlap. If the house is build from timber the anchors should be attached in the window frames or in the next stud up (this usually run's 450 mm away from the window).



Step 2:

Mark all the holes, 300 mm apart on both sides and top and bottom. The three holes closest to each other in every corner should only be 200 mm apart. Make sure all the holes line up, level at the top and bottom and plum on the sides. Remember that 95% of the time the holes is all you see. It's important to spend some time lining up the holes properly. If you have multiple openings a pre-measured jig may speed up the process and improve consistency



Step 3:

Drill 12 mm holes on the marked spots. Pre-drilling every hole with an 8 mm drill bit makes it easier to line up the holes nicely.



Anchors in the corner should be 200 mm apart



Step 4:

Before you install the anchors make sure all the holes are clean. This can be done with your vacuum cleaner. When the holes are nice and clean you can install the anchors. Install the anchors slowly to avoid widening the hole and spinning of the anchors. No matter how careful you are sometimes an anchor will keep spinning. Take the anchor out and re install it after you coat this with a 2-part concrete epoxy (any brand will do)



Step 5:

Every clip is made from a front and a back section which are screwed together with 8 small screws.




Install the 4 corner clips on the fabric and hang the fabric in front of the opening



Step 6:

Attach the rest off the clips on the fabric, make sure the holes in the clips line up nicely with the holes in the wall. Remember, it's important that the holes in the wall are in line, it doesn't matter if the clips don't line up perfectly as long as they do the job which is holding the fabric in place. Pull the fabric taught before you put the screws in the clips but don't over tighten

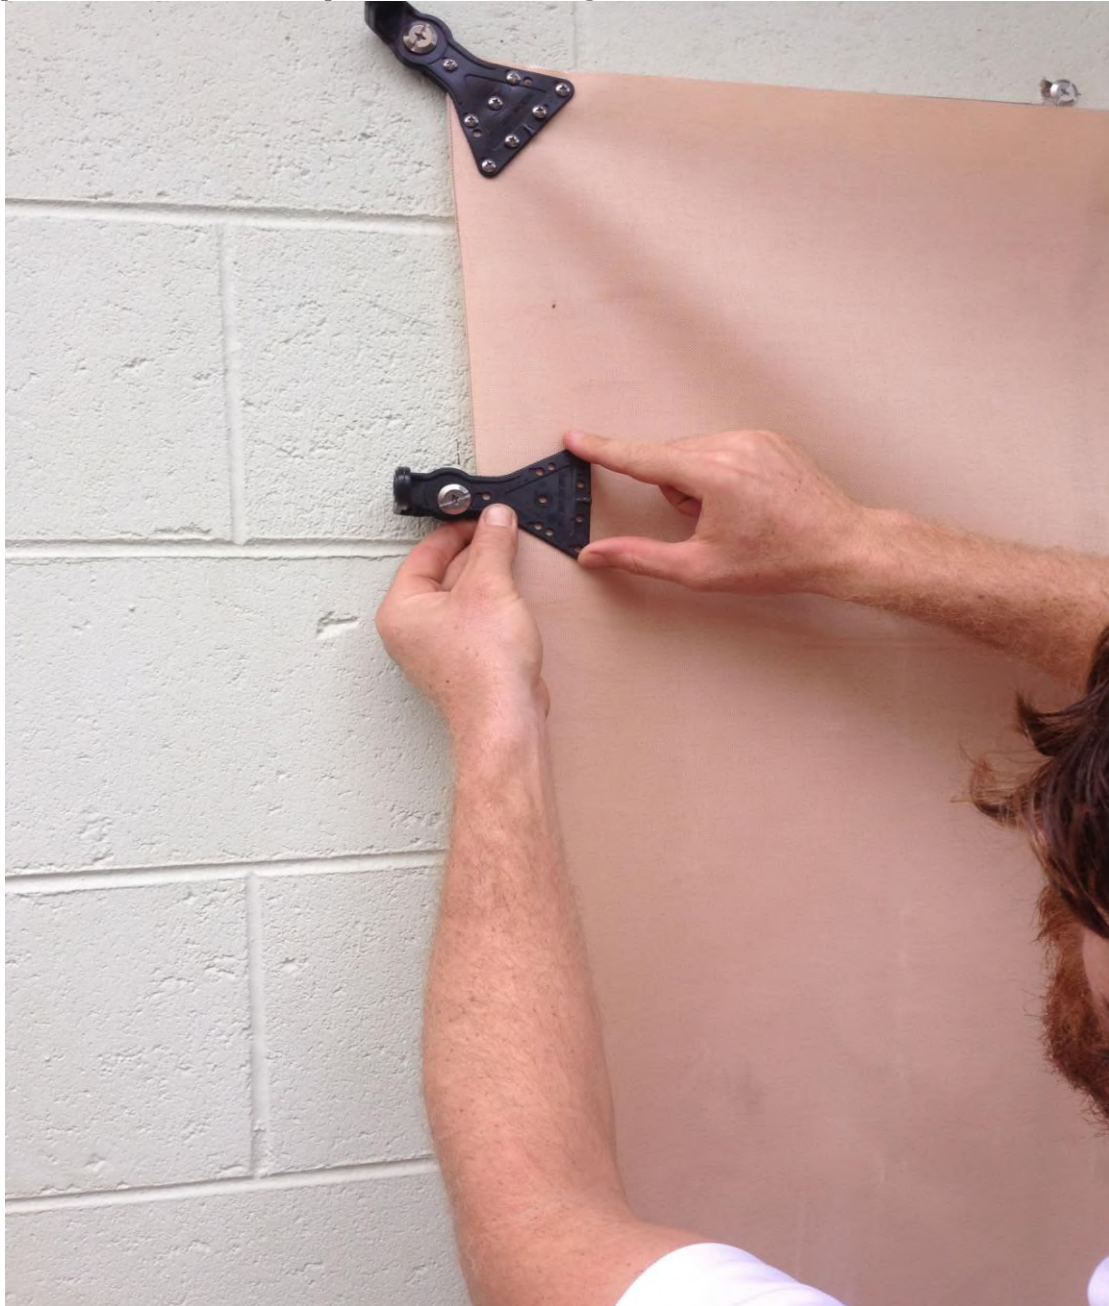

Install all 8 screws in the clips



